

## Product Description

Thanks you for choosing our remote, it is honored that we can provide conveniences for your life.

KT-E08 is a new product with several patent technologies which is invented by our engineers. No matter winter or summer, operation by one key, also suitable for children and the older.

KT-E08 is a universal air conditioner remote control with 6000 codes, suits for domestic, international brands; old and new types, etc, it can be used for 98% air conditioners in the world. This remote also has clock, timer on and off, room temperature display and other functions, etc. It is the best choice for you to replace the remote.

## Setting

Put 2 AAA (UM-4, R03) batteries as per polar indicated on battery cabin. Choose one of the setting methods as below.

### Code input

1. Find out the codes from code table, there are many groups codes of each brand. Please try the first group, if it does not work, try the second, and do it like this until the codes can operate your equipment. Ex: AUCMA, you can choose 0288, if it does not work, please try the 0289.

2. Press "select" key, the code on LCD flashes. Enter 4 digit codes in turn. EX: "0288", press "0", "0" stops flashing, press "2", "2" stops flashing, press "8", "8" stops flashing, press the last "8", "8" stops flashing, ending the code input, setting is finished.

3. Aim to the air conditioner, press "one key", check whether it is work or not, if it works, setting succeed, if not, try another group until it works.

### Automatic search

If you do not know the brand of your air conditioner, or if your brand is not listed in the code table, please operate as per following steps:

1. Put the remote control aim at your air conditioner, press the "SELECT" key for 5 seconds and then release, remote control is entering the auto-search status, emit the signal continuously, the code flashes and increases. While the air conditioner receives the signal, and send one buzzer, press any key to confirm.

2. Put remote aim to the air conditioner again, press "one key", if it works, setting succeeds, if it does not work; repeat these steps until it can use for your equipment.

## Using of one-key

Whether in summer or winter, when you need to use the air conditioner, just put the remote aim at your air conditioner and press the "one-key". Remote can judge it is summer or winter according to the current temperature. In summer, the temperature will be set in 26°C. In winter, the temperature will be set in 20°C. If you feel not comfortable of the temperature, you could use temp "+" or "-" adjust the temperature. Of course, the remote also has the functions of other remotes; you could use it as the original.

## Clock set up

1. Press the "CLOCK" button, it is blinking.
2. Press the time "+" or "-", setting to the current time.
3. Press the "CLOCK" button again, stop blinking, the time setting is complete.  
(If you did not press the "time" button, it can be setting automatically after 5 seconds)

## TIMER ON AND OFF

No matter whether the air conditioner on or off you could set the timer on and off at the same time.

1. Press the "TMR on" button, the LCD displays the clock signal and time blinking. Press "TIME/code" "+" "-" button, adjust to the required time, and it will confirm the time of turn on after 5 seconds.
2. Press the "TMR off" button, the LCD displays the clock signal and time blinking. Press "TIME/code" "+" "-" button, adjust to the required time, and it will confirm the time of turn off after 5 seconds.

Note:

1. The time frame can be set between 00-24 hours;
2. Press the "timer on" or "timer off" two times continuously, cancels the timing.
3. After timing setting, the launch direction of remote control must be aim at the receive direction of your air conditioner in the effective distance, otherwise the timing setting ineffectively.

Temperature display

Press "temp" to display the room temperature, and it will return to setting temperature after 5 seconds, so you could use it as a thermometer, offer convenience for controlling the temperature anytime.

## Attention

1. If it is not used for a long time, remove the battery to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set model code again.
2. As usual the LCD only display the time when pressing model codes "Enter" key, you can find the code and it is showed on LCD. After 5 seconds it returns time.
3. Check carefully that there is no remora between remote controller and Air conditioner when the time on/off doesn't work. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller.
4. The manufacturer keeps the right to change the parameter and function of product.

## Technical Parameters

**Controllable distance:** Large than 8 meters (According to the machine)

**Battery model:** Battery AAA(UM-4, R03)×2

**Dimension:** L133mm×W45mm×D23mm

**Weight:** Approx 52g (excl. the batteries)

★ The final explanatory right is reserved this company. Any alteration on the design and model will not be further notified.