

## Product Description

KT-4000 integrates more than 100 brands with 4000 models in one remote controller. You can press the numeric keys (0-9) for the required code directly. It has accurate clock, timer on/off, permanent memory, and a "Fast cool/heat" feature convenient for your use.

## Brand Code Setting

1. Open the battery cover, put 2 AAA (UM-4, R03) batteries as indicated.
2. Find the brand code from the model codes table.
3. Press "SELECT" key, the code on the LCD blinks. Enter the 4 digit code in. Code is confirmed.

Note: Try each brand model code one by one, until your remote can operate the air conditioner.

## Auto-search

If the air conditioner brand is unknown or not listed in the code table, search your code as follows:

1. Aim remote control at your air conditioner, press "SELECT" key for 5 seconds and release. When the air conditioner sends a buzzer, press any key to confirm.
2. Try other functions keys in your remote. If it does not work, repeat the above steps.

## Using "F. COOL" and "F. HEAT"

Press "Fast Cool" or "Fast Heat" key, air conditioner will be cooled or heated accordingly. Note: Temperature can also be adjusted by pressing the "+" and "-" keys accordingly.

## One key nonstop function

Press "one key Power" key, it can open air conditioner, and also judge the room in summer or winter, and then set the cool or heat mode, set the temperature 26 or 20 degree, set fan middle and swing auto.

Note: Temperature can also be adjusted by pressing the "+" and "-" keys accordingly.

## Clock set up

1. Press the "CLOCK" key ,clock signal blinks.
2. Press the "+" and "-" of the "TIME" key to set the current time.
3. Press the "CLOCK" key again. (If not pressed, time is set automatically after 5 seconds)

## Timer on/off

1. Press the "TIMER ON" or "TIMER OFF" key, the LCD displays the clock signal and time blinks.
2. Press "+" and "-" of the "TIME" key, adjust the time to make the air conditioner turn on /off automatically.
3. Time blinks (it will stop after 5 seconds). LCD displays current time and clock signal.

### Note:

1. You only can set timer on after turning off the air conditioner, and set timer off after turning on the air conditioner
2. If you press "TIMER ON/OFF" twice continuously, time is deleted.
3. After setting timer, keep aiming momentarily your remote control at your air conditioner within distance. If not done, the setting is deleted.
4. To see the TIMER, press the "TIMER ON/OFF" key, LCD will display the time (after 5 seconds it will display the current time)

## Room Temperature

Press "ROOM TEMP" key, LCD displays current room temperature as a thermometer.

## Attention

1. If not used for a long time, remove the batteries to avoid damaging the machine due to battery liquid leakage. When the LCD looks dim, please replace batteries. Do not use new and old batteries together.
2. LCD only displays the time. If "ENTER" key is pressed once, you can find the code.
3. The manufacturer keeps the right to change the parameters and functions of the product.

## Technical Parameters

Controllable distance: Greater than 8 meters  
Power supply voltage: DC 3V  
Battery model: Battery AAA ( UM-4, R03)X2  
Dimension: L127mmXW48XD22mm  
Weight: Approx.65.5g (excl. the batteries)